

**Two
dots**



ONEKICK PRO

ELECTRIC SCOOTER

INSTRUCTION MANUAL

INTRODUCTION

Congratulations on the purchase of your new Onekick Pro!

Easy and fun to use, yet convenient to carry with you anywhere you go. Onekick pro will allow you to move around effortlessly by exploiting cutting-edge, green technology.

This manual will help you understand how to use the device properly. Please read it carefully, comply with all the safety rules and pay attention every time you decide to use your Onekick Pro. You are about to embark on a unique and exciting experience!

SAFETY

Before getting on your Onekick Pro, please read these instructions carefully. You should pay attention and stay focused at all times when using your device, even after you have become more acquainted with it.


Read this manual carefully and keep it for future reference. The reseller shall not be liable if the product is used in any way that is not compliant with its intended use or if the instructions in this manual are not respected.

WARNING

Onekick Pro may be dangerous if you do not pay due attention and care. Make sure you have read the manual before using your Onekick Pro. Pay special attention to the following::

- Always check the battery level before use. Do not use if the battery is discharged or if its level is below 20%.
- Find out about local laws to understand how and where to use the Onekick Pro in legal ways and always follow the relevant regulations.
- Avoid obstacles, slippery surfaces, cracks or steep climbs.
- Avoid roads and surfaces with water, sand, leaves and other debris.
- Do not immerse in water.
- Do not exceed the maximum load of 100Kg (including additional weights): exceeding the load limit may cause damage to the vehicle and the rider.
- Onekick Pro is not intended for children: only riders over the age of 13 should use it, and it is important that you determine whether the rider meets the necessary requirements in terms of coordination, physical strength and maturity before boarding.
- It is absolutely forbidden to use and transport two or more people.
- Wear safety equipment such as helmets, knee pads and elbow pads to prevent injury of any kind.
- Wear closed shoes.
- Do not use it in poorly lit areas, close to other vehicles. avoid jumps or ramps.
- Avoid jumps or ramps.
- Always drive with caution and responsibility, avoiding using your scooter in bad weather and on dangerous road surfaces.
- Do not use the device if you are under the influence of alcohol or drugs, nor if you are not in top physical shape or are pregnant.
- Stay alert and concentrated to avoid collisions with people, animals and surrounding objects.
- Do not use headsets or smartphones while operating your device.
- Pay attention to speed, keep the right speed and pay attention to the safety distance, so as to avoid as much as possible braking too abruptly.
- Respect pedestrians and give them priority.
- Before using the product, please check that the screws are firmly tightened.
- Do not modify the product except in accordance with the manufacturer's instructions.
- Check the product periodically. Replace worn or broken parts immediately.
- When using the product, keep hands and fingers away from wheels and other moving parts to avoid the risk of crushing.

COMPONENTS

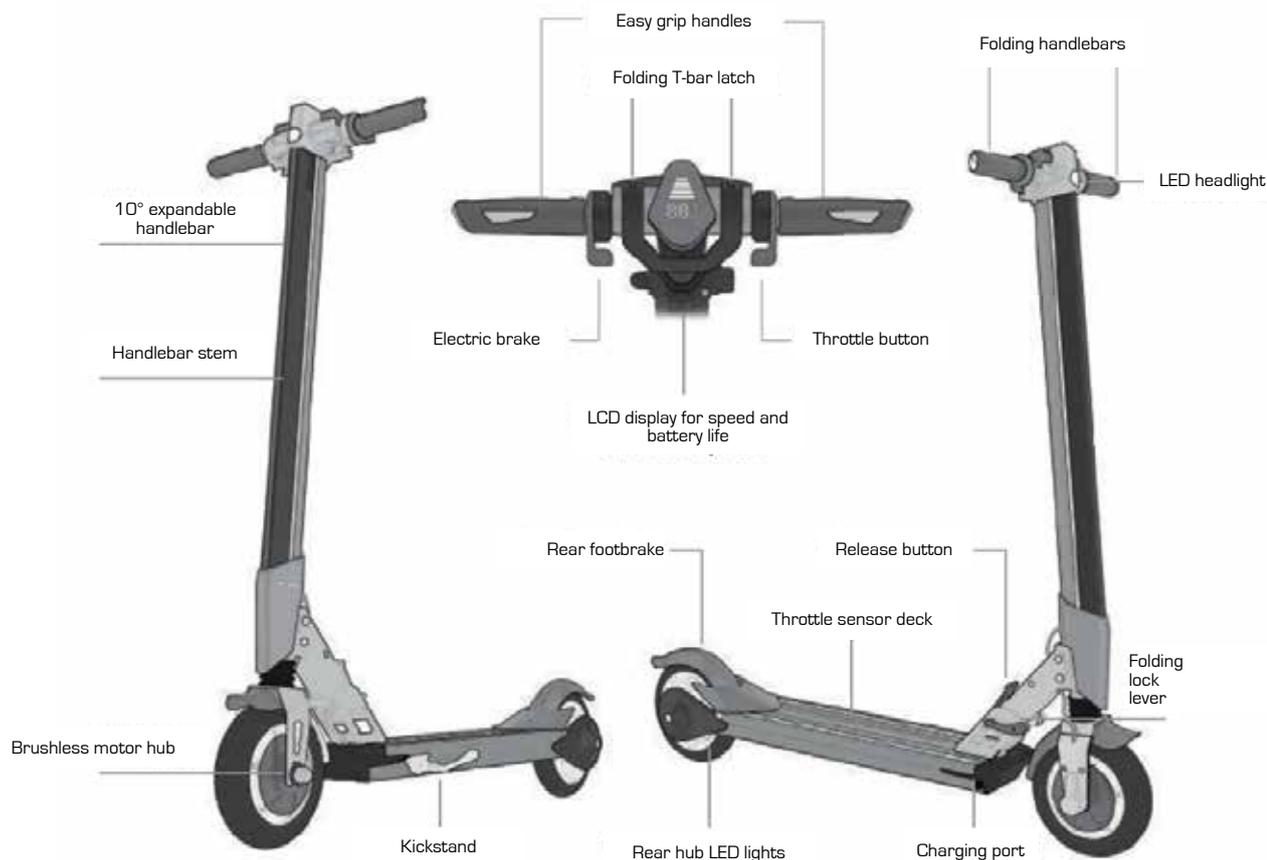

UNFOLDING/FOLDING THE E-SCOOTER

1. Release the locking lever and push the unlocking button while you lift the steering rod until you hear a click as it locks into place. Close the locking lever.
2. Lift the fixing lever on the steering rod up and open the handlebars. Push the handles inwards and lock into place by pushing the fixing lever down. Make sure the steering rod has been locked correctly into place.
3. Release the lever on the steering rod to regulate the height. Once you have set the desired height, lock it into place with the quick fixing lever.



CHARGING THE BATTERY

Kindly charge the battery completely before first use. Insert the charger cable on the front right of the platform. While charging, the LED light will be red. Once the battery has been fully charged, the LED lights will turn green. A full charge will take about 3-4 hours.

WARNING

- Reduced battery autonomy in winter is perfectly normal since the battery performance decreases in cold weather.
- Store the product with the charged battery. Leaving the product with discharged battery or with battery level close to 0% over long periods of time may cause damage to the battery. Recharge the device at least once

a month even if you did not use it.

- Keep the device in a sheltered, cool and dry place. Wet places may cause condensation inside the battery and damage it.
- Recharge the battery in a clean, dry place, away from inflammable objects, heat sources and direct sunlight.
- Do not overcharge the batteries.
- Do not recharge at temperatures close to 0°C.
- Use the provided power supply only.
- Do not use the device while it is charging.

TURNING YOUR SCOOTER ON AND OFF

Onekick Pro will automatically turn itself on when it detects that the front wheel is moving.

To turn Onekick Pro off, you need to simultaneously push the accelerator lever and the brake for about 3 seconds.

Onekick Pro is equipped with a position light on the front. You can turn the light on and off by pushing the electrical brake for 3 seconds.

GUIDE

- Hold the handlebar with both hands and place one foot on the platform.
- Use the foot on the ground to push yourself forward and take off. Then push the accelerator lever on the handlebar. Once you reach a speed of 3 Km/h the engine will start.
- Especially when you are still learning to use the vehicle, try to moderate your speed to become more familiar with the device.
- To slow down, you can use either the electrical or the mechanical brake.
- To use the electrical brake, you need to push down the lever on the left-hand side of the handlebar while driving and be careful not to push too hard and too abruptly to avoid blocking the wheel.
- The mechanical brake is located on the rear wheel and can be activated by pushing on the wheel cover with your rear foot. The pressure will slow down the scooter.
- If you want to brake, place one foot on the brake above the back wheel and press to a halt.

REMEMBER

Onekick Pro is designed for indoor use and for use on smooth outdoor surfaces. Pay attention to the ground you are about to move on and avoid wet, irregular and slippery surfaces at all times, as well as ramps, jumps and obstacles in general.

If a surface suddenly becomes unsafe, stop using the device immediately to prevent possible falls.

The wheels of Onekick Pro must always be on the ground for the device to work properly. Otherwise, you may lose grip and this would cause potential falls. Avoid sudden manoeuvres and impacts of all kinds to prevent any grip losses.

Onekick Pro is not approved for road use and it must be used in private and pedestrian areas only, after checking the local rules. Children using the device should be supervised by an adult.

DISPLAY LCD

Onekick Pro is equipped with an LCD display that shows the battery charge level, speed, and Bluetooth connection.

You can connect the device to your smartphone by Bluetooth.



APP FOR SMARTPHONES

Onekick Pro is equipped with multimedia functions thanks to the dedicated App "TwoDots MoveYourFun" available on App Store and Google Play. The App serves different functions, among which is an on-board computer to show parameters like speed, battery level and distance covered (a few functions may not be immediately available. They may be ready with future updates).



Pairing the device is very easy. You simply have to:

- Switch on the device and activate the Bluetooth on your smartphone.
- Open the MoveYourFun App and press the icon on the top left, then select "Onekick Pro" to pair the device.
- Enter the default password '000000' (you can change your password later).

PLEASE NOTE

When no Bluetooth connection is available, the icon on the LCD display on the device will be white. When Onekick Pro and your smartphone are connected, the icon will turn blue.

MAINTENANCE

Store the device in a dry place, away from any heat sources and direct sunlight.

A long exposure to UV rays, rain and atmospheric agents may damage the materials that make up the vehicle. If you do not recharge the lithium ion batteries for long periods of time, they tend to discharge automatically. Full battery discharge or battery levels close to 0% may damage the battery and make it unfit for future use. It is advisable to charge the battery at least once a month. If required, clean the device with a wet cloth. When you do so, the device must be switched off and disconnected from the power supply. Do not spray low- or high-pressure water directly on the device and do not plunge it into water or any other liquids..

WARRANTY

Please, keep the payment receipt as a proof of purchase so that you are entitled to warranty pursuant to the law. The warranty is structured as follows:

- **2 years' warranty for the vehicle, except for the battery and tyres.**
- **6 months' warranty for the battery, engines and tyres.**

Warning - The warranty does not cover the following conditions:

- Malfunctioning caused by incorrect use.
- Malfunctioning caused by unauthorized changes, by the disassembly of components or by reparations completed by the user.
- Damage or malfunctioning originating from incorrect storage.
- No or non-compliant proof of purchase.
- Damage caused by use on improper surfaces.
- Damage caused by long use in the rain or by plunging the device into the water.

CONTACTS

2018 Twodots

Twodots is a registered trademark of X-Joy Srl.

Produced and imported by X-Joy Srl - Via Sempione, 17 - 21011 Casorate Sempione (VA)

The product meets the essential requirements and all provisions of the following European Directives: 2014/30/EU - 2014/35/Eu - 2011/65/EU.

Customer care: support@twodots.it - www.twodots.eu